

# Thermostatic Cartridge

Your Steam shower is fitted with a Thermostatic Core/Cassette. Should you need to remove or replace the cassette for maintenance or replacement, follow the instructions below.

**BEFORE STARTING ENSURE THAT THE WATER & ELECTRICAL SUPPLIES ARE DISCONNECTED.**

**It is imperative that you check and ensure that the water supply to your unit is balanced with a pressure of between 1 and 3 bar as an imbalance will damage the core.**



Remove the temperature selector knob. Remove the chrome coloured plug in the dial to allow access to the Alan grub screw inside. Loosen the dial until it removes easily.



Remove the plastic temperature guard from the brass spline exposing the head of the core.



Unscrew chrome Temperature face plate as shown.

Thermostatic Cartridges can be purchased at <http://www.smart-price-warehouse.co.uk>